



## ManageUPSNET III ADAPTER

### Supplemental Installation Notes: POWERVER Security One

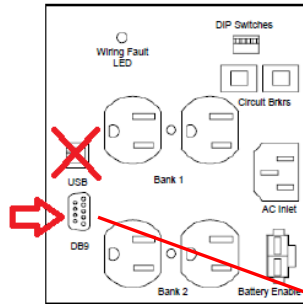

**ManageUPS Part Number:  
AM-P1-RE External Adapter**

 Cable: 504-12154  
(721-3266-DD0)



**1.** Use the green wire provided with ManageUPS to connect the earth reference screw on ManageUPS chassis to a chassis cover screw on the UPS secure ManageUPS ESD grounding (earth shielding) connection to UPS.

**2.** Connect the UPS Port on ManageUPS to the DB9 Serial port as shown, using the RS232 UPS cable provided: 504-12154 (721-3266-DD0)

**3.** Connect the AC/DC power supply included, to an AC source (100-240VAC – 50/60Hz) that is powered by the UPS output. Connect the DC output cable from the power supply to the DC Input port on ManageUPS.

**4. Serial Configuration:**  
ManageUPS NET can be easily configured over the IP network. See the ManageUPS Quick Start Guide for more information.

To configure network and other settings using the serial method, set your PC/terminal to 2400,8,N,1 – send Line Ends with Line Feeds...

- AM-P1-RE: Use cable (CA-2A00S-02) to connect a PC/terminal to ManageUPS Terminal port.

Type "CONSOLE" to access the configuration menu.

See your ManageUPS NET user documentation for further details.

Default :  
username = "admin"  
password = "admin".

**MopUPS Pro serial monitoring:  
Connect the Computer serial port to  
UPS DB9 port, using the RS232 UPS  
Cable 504-12154 (721-3266-DD0)**

NOTE: Battery Designator parameter.  
For Security One UPS leave the default Battery Designator variable as "0".

Set Battery Capacity Designator and Battery Install Date in the UPS>>Configuration Page of the Adapter WEB interface