


Security II Quick Start Guide

This unit is shipped with the internal batteries disconnected.
Before starting the UPM, please follow these battery connection instructions.

1. Remove UPM from the box





Some units may require 2 people to lift.

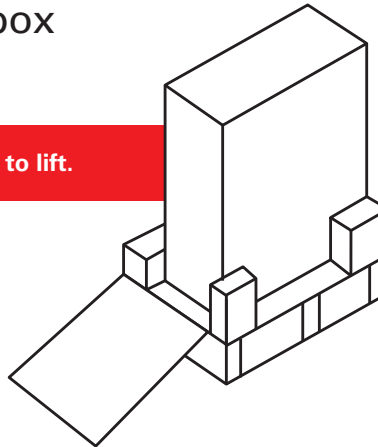


OR



2. Attached included outlet cord and plug UPM into wall.

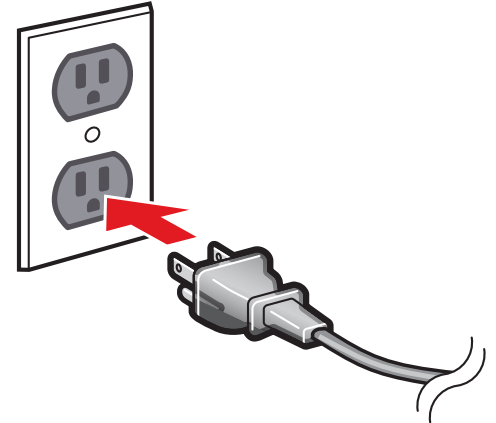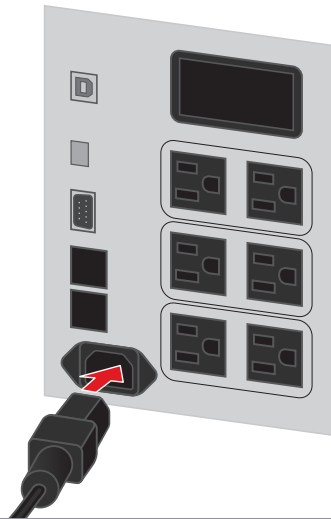

3. Remove the front plastic cover by pulling at the finger indents.


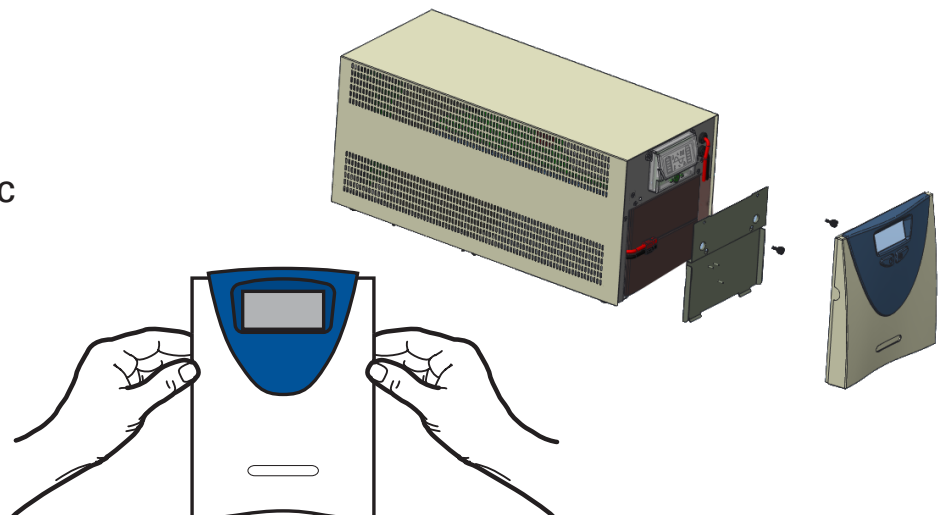


Note: You will need to remove the metal battery cabinet panel on medical units only.


Security II Quick Start Guide

4. Connect battery connector

Note: Connectors on medical units are behind the metal battery cabinet panel.

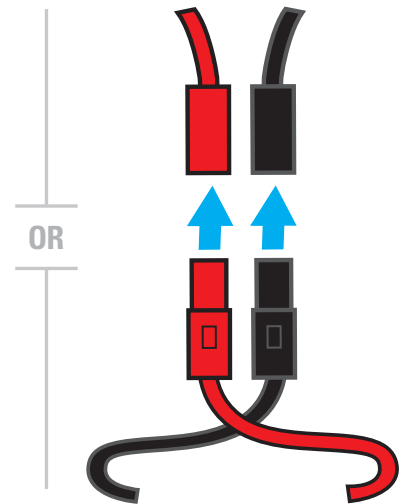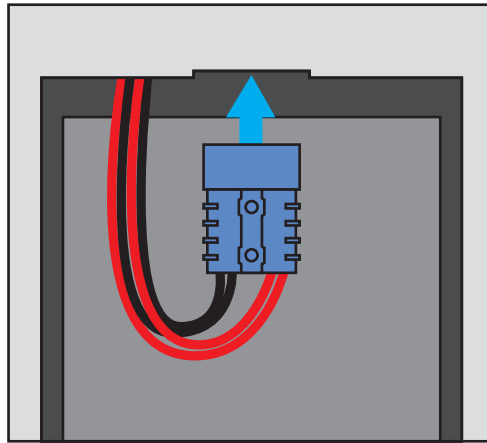

5. Put front cover back on and remove the yellow warning label

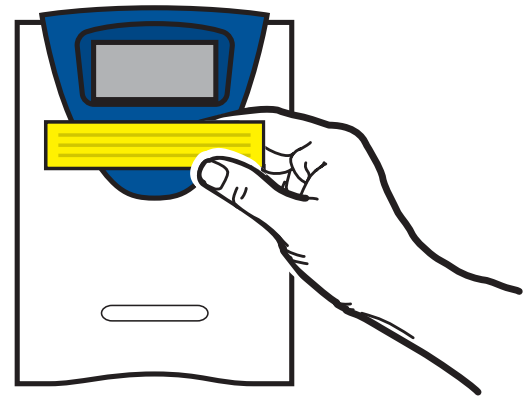

IMPORTANT:

Wait 15 seconds after inserting the battery plug(s) before pressing the ON switch on the UPM front panel.

If you ship the UPM to another location at a later date, disconnect the battery plug(s) first to ensure that safety is maintained during shipment.

6. Turn UPM on by pressing ON button for 3 seconds

